
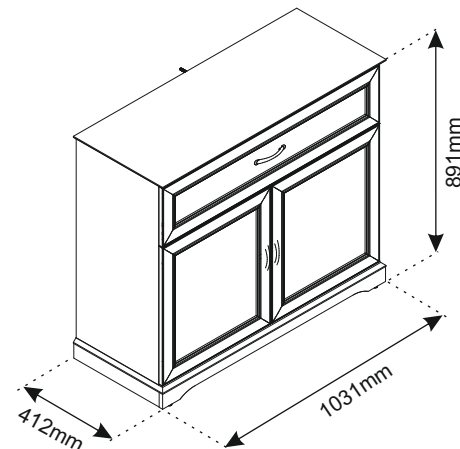
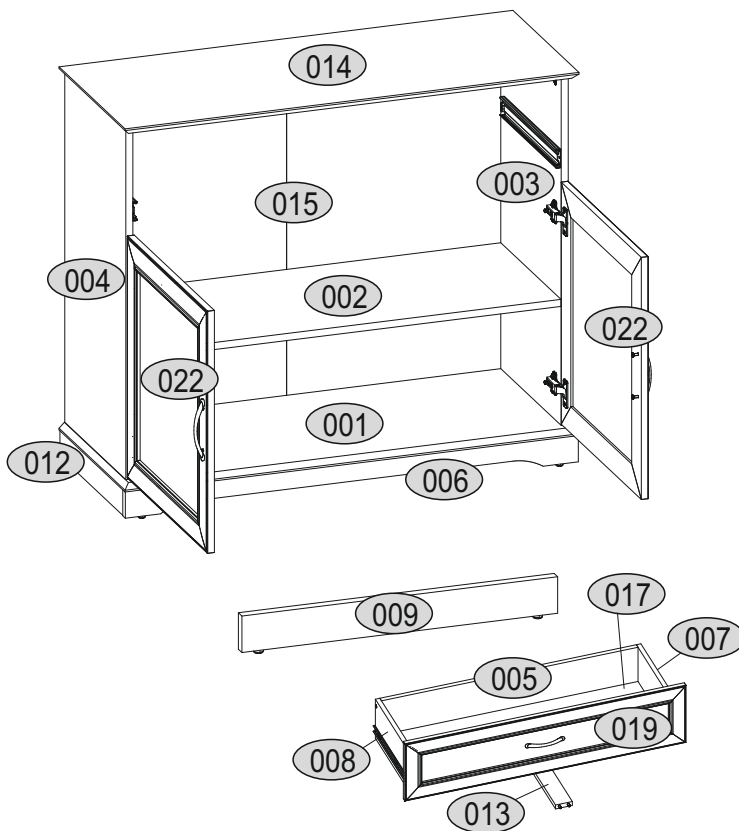
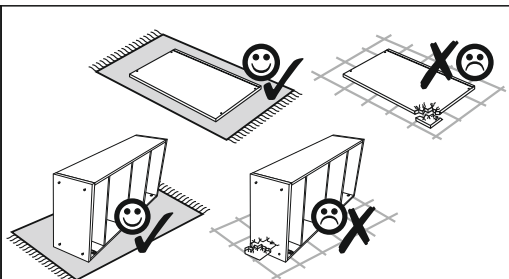
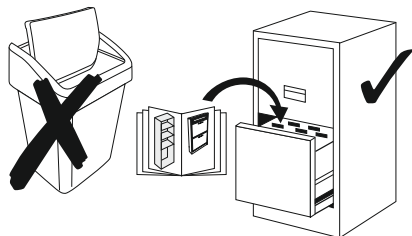
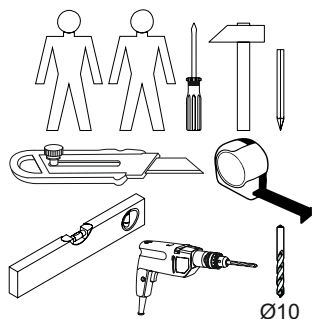



Instrukcja montażowa


KOM 2D1S SORETTO

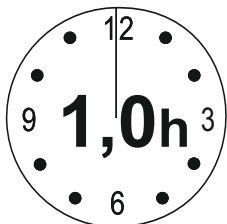

Kod	Wymiary				Pakiet
001	1031	412	16	1	1/2
002	973	376	16	1	1/2
003	793	381	16	1	1/2
004	793	381	16	1	1/2
005	916	160	16	1	1/2
006	1029	60	16	1	1/2
007	350	160	16	1	1/2
008	350	160	16	1	1/2
009	519	60	16	1	1/2
010	395	60	32	1	1/2
012	395	60	32	1	1/2
013	334	60	16	1	1/2
014	1031	412	16	1	1/2
015	811	990	2,5	1	2/2
017	934	352	2,5	1	2/2
019	1003	234	18	1	2/2
022	500	550	18	2	2/2
Akcesoria					1/2






Akcesoria:

18x r1 15x12 	30x f1 Ø8x30 	1x f3 	1x n14 
2x j2 Ø4x9 	33x p25 Ø3.5x16 	3x c80 	18x r16 Ø5x24 
1x p17 Ø6x50 	1x n260.01 	5x n221.01 	1x z1 
4x a144 	4x b119 	1x lb350 	8x e1 Ø7x50 
12x s2 	8x k1 	35x l1 	

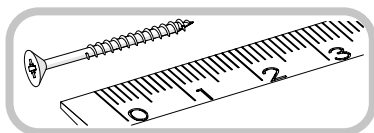




1

r1	f1	r16	k1
			
x14	x22	x10	x8

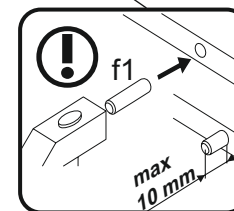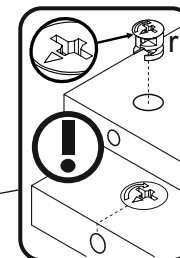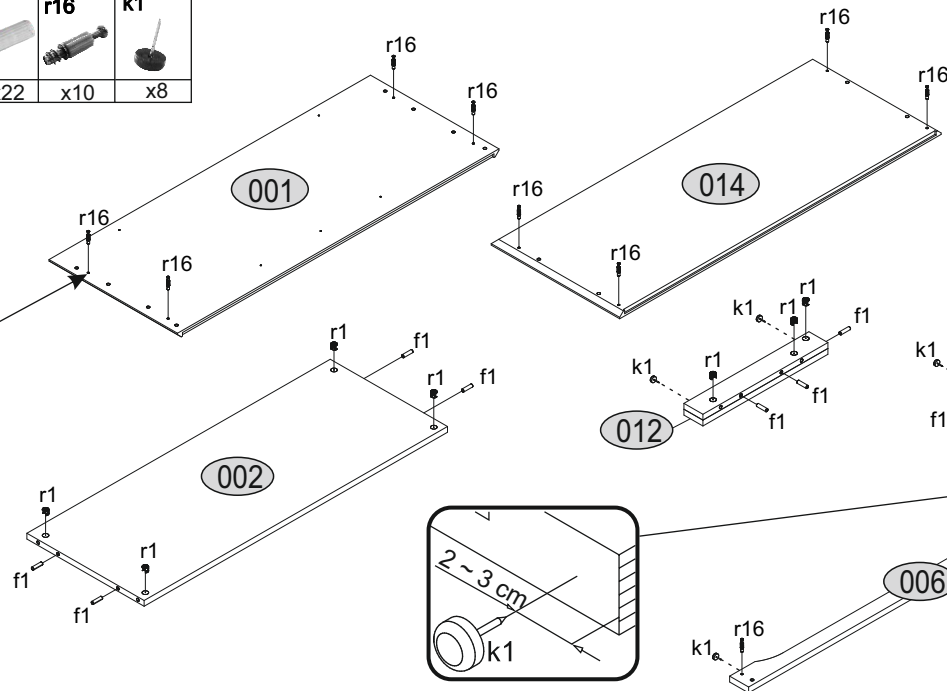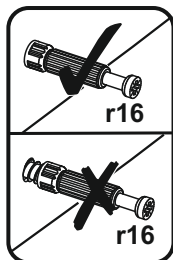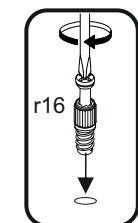



2

r16	r1	f1	p25	b119	lb350
					
x4	x4	x8	x6	x4	x1

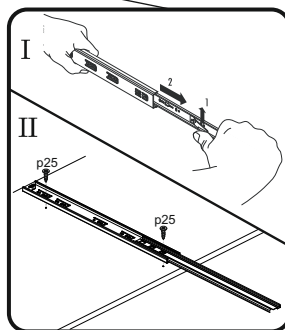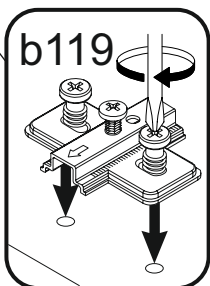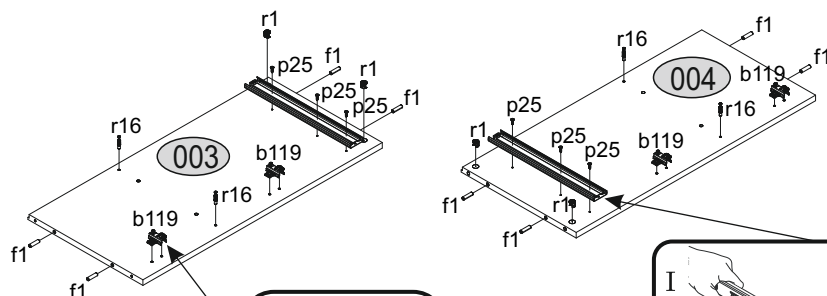


3

r16	p25	n221.01
		
x4	x5	x5

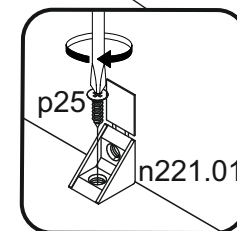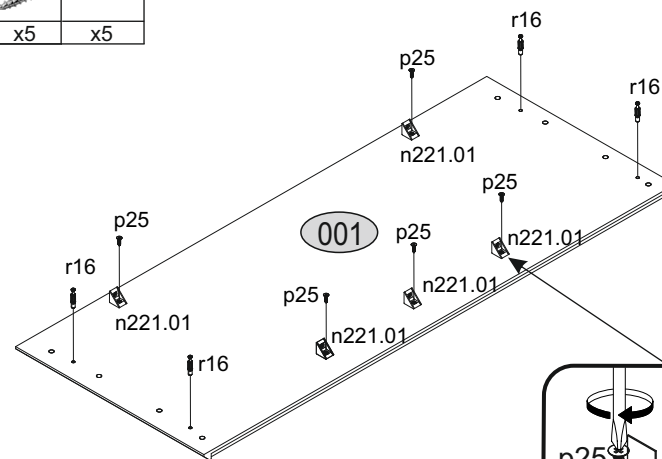


4


a144	p25	c80	j2
x4	x8	x3	x2

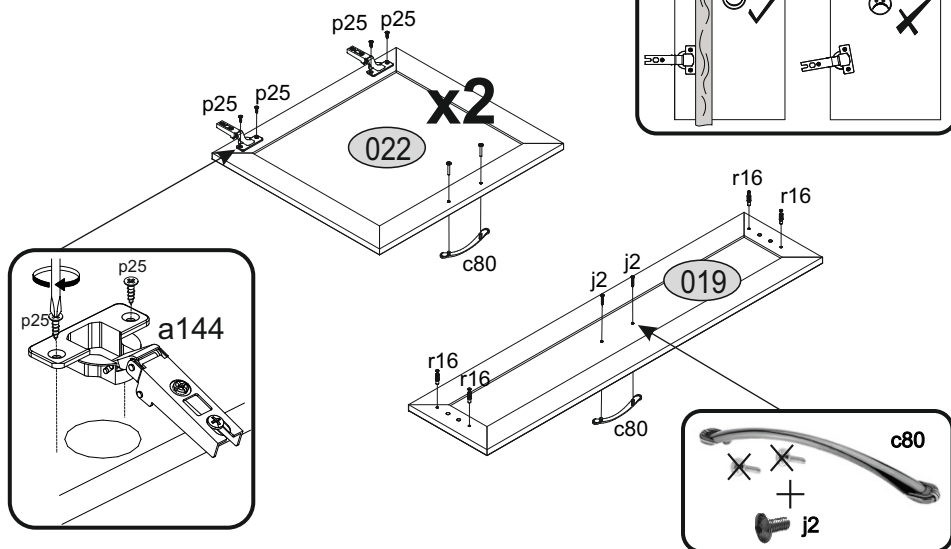

5

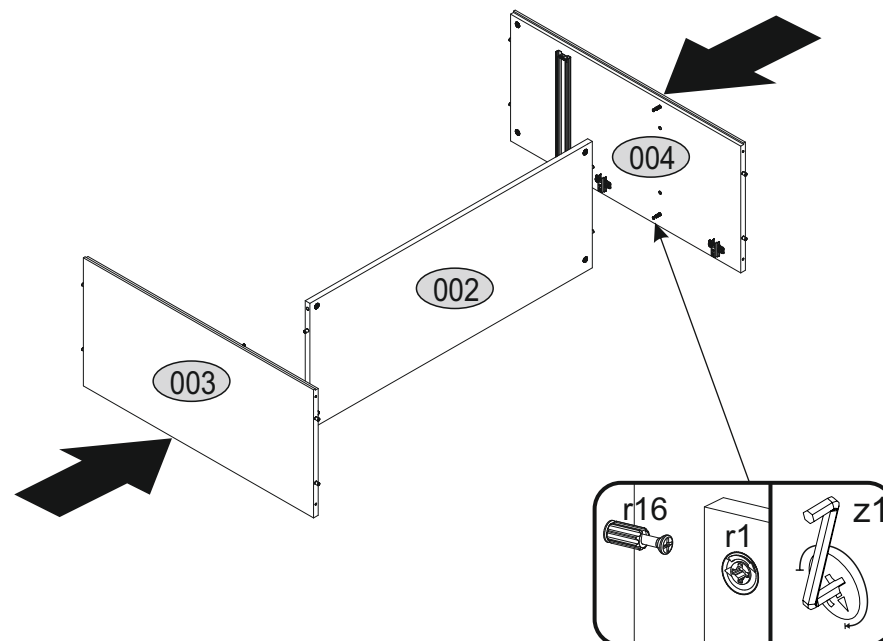


6




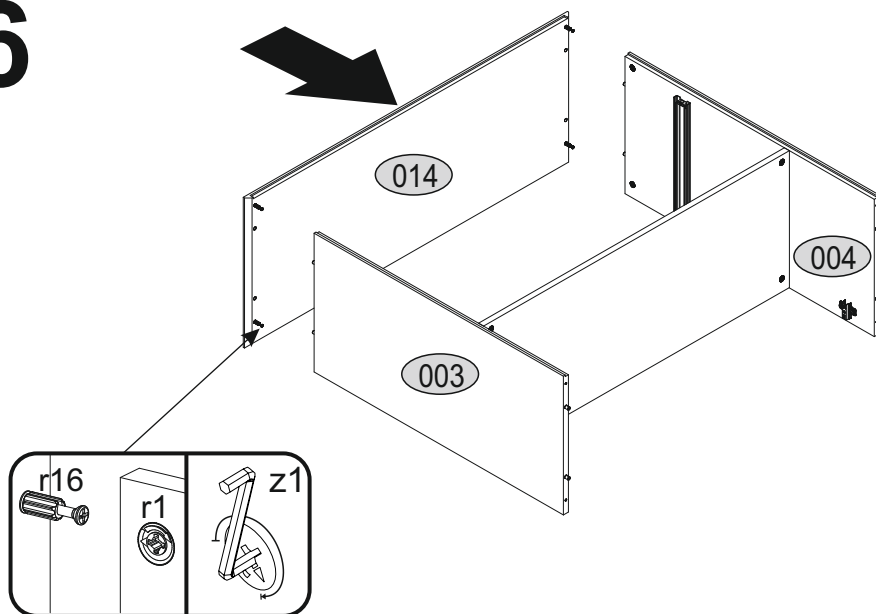


7



p25
x3

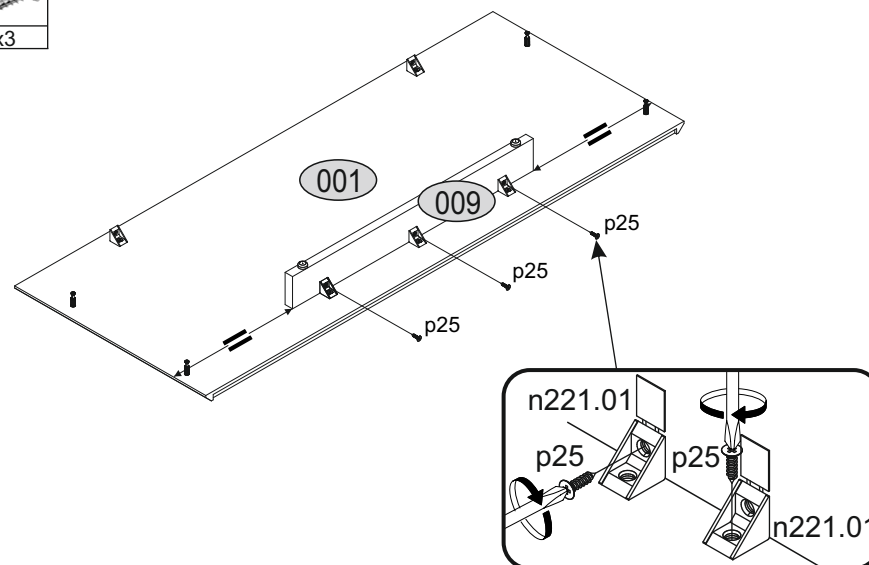




8

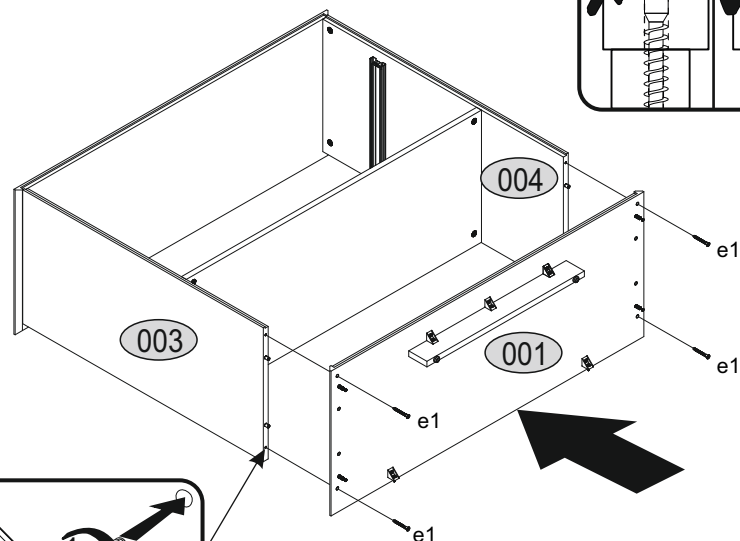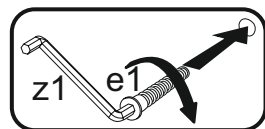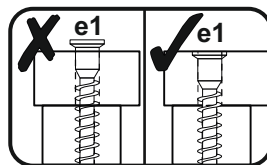








9

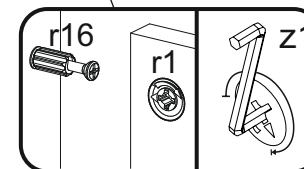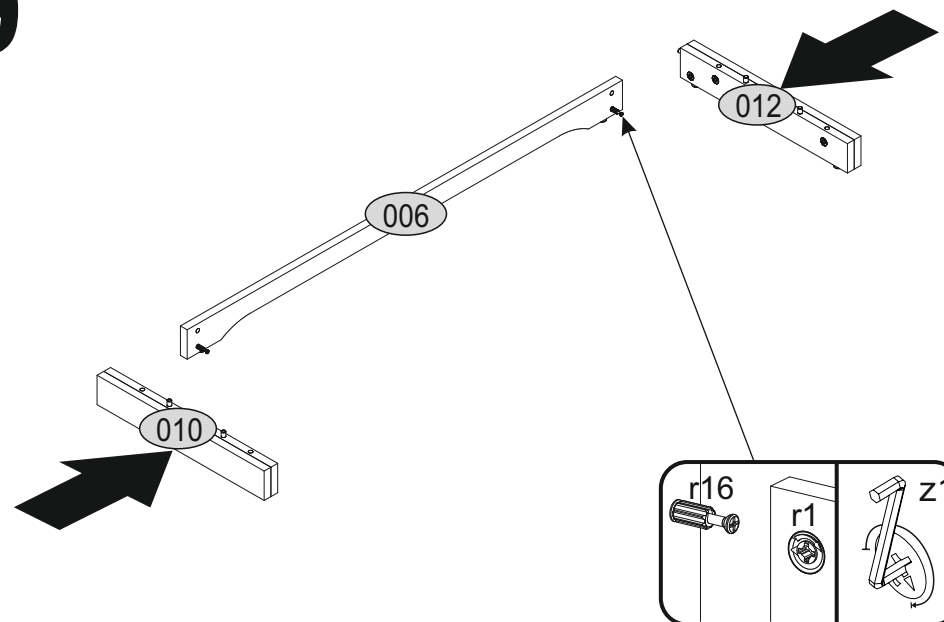





10

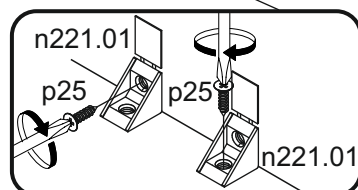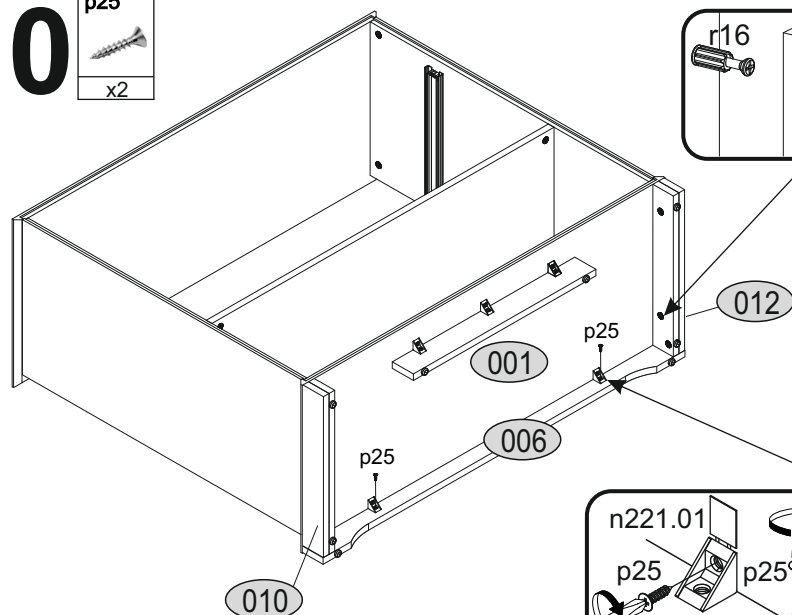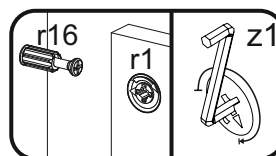



11

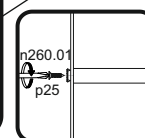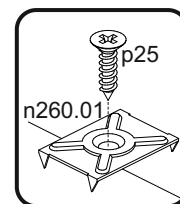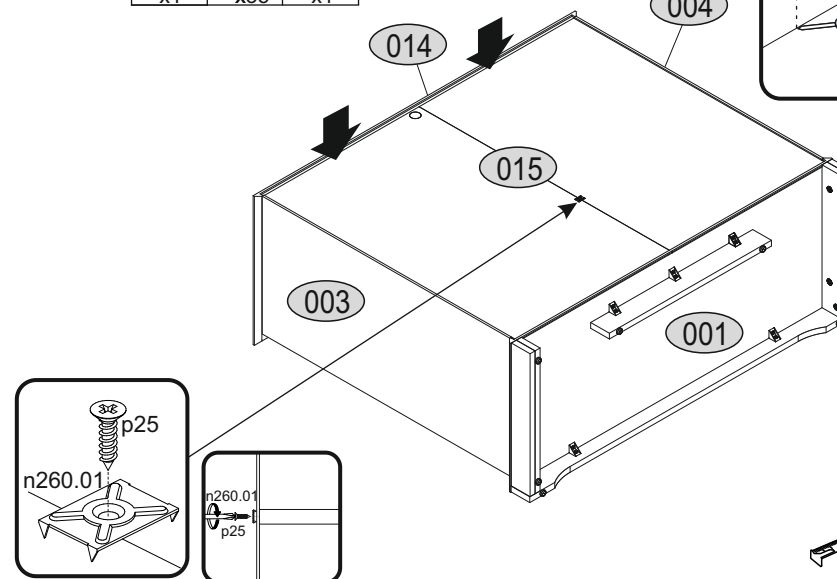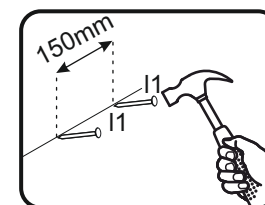



12

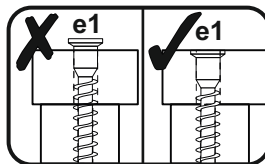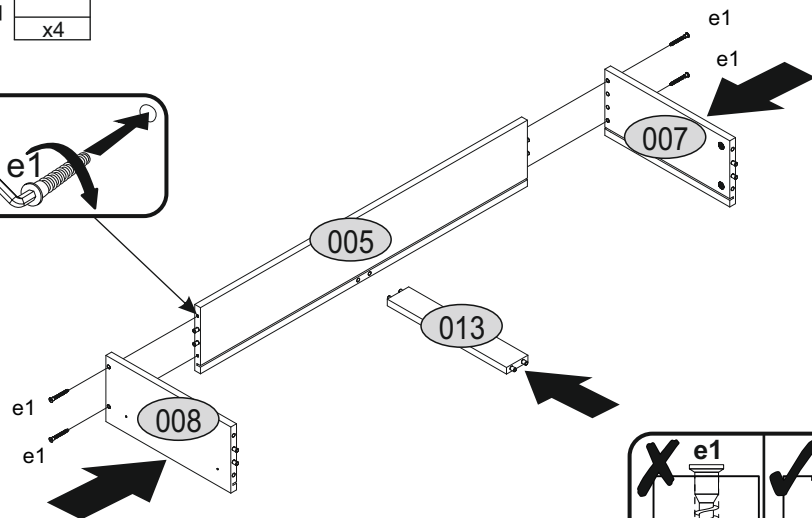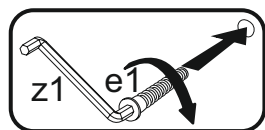




13

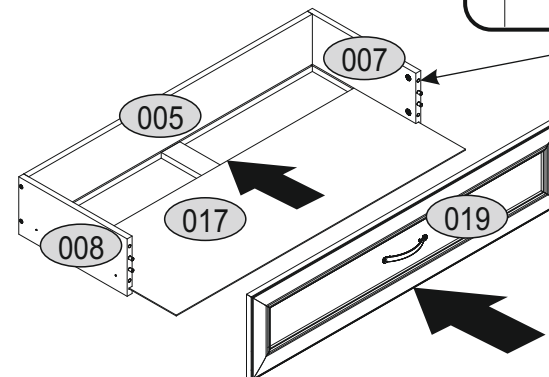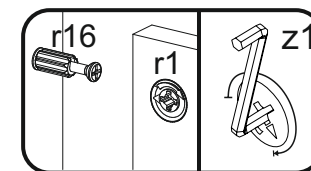





14

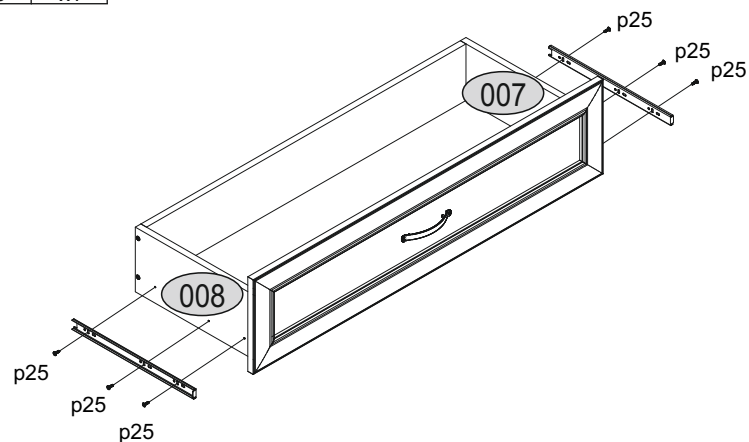

15

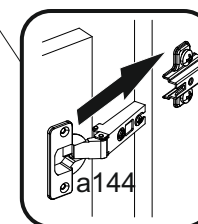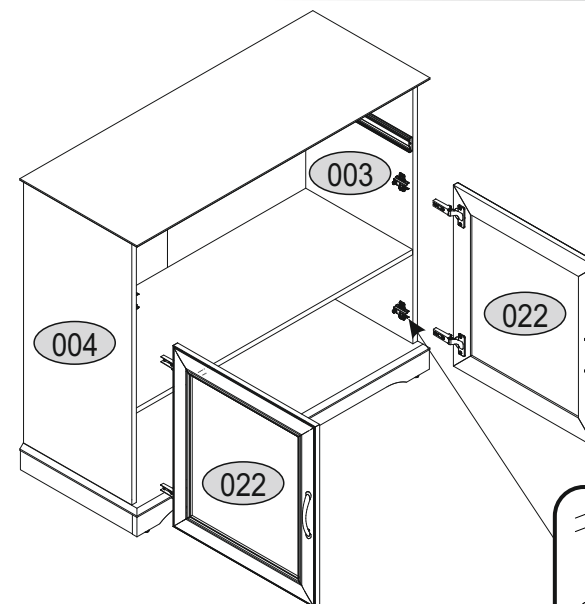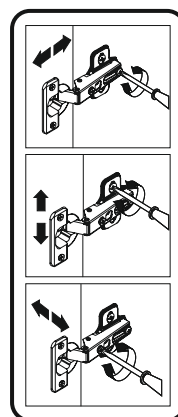

16

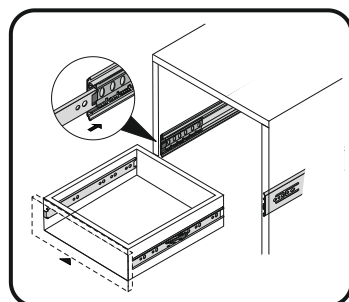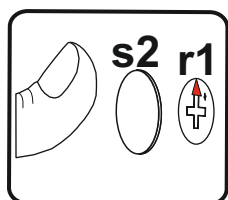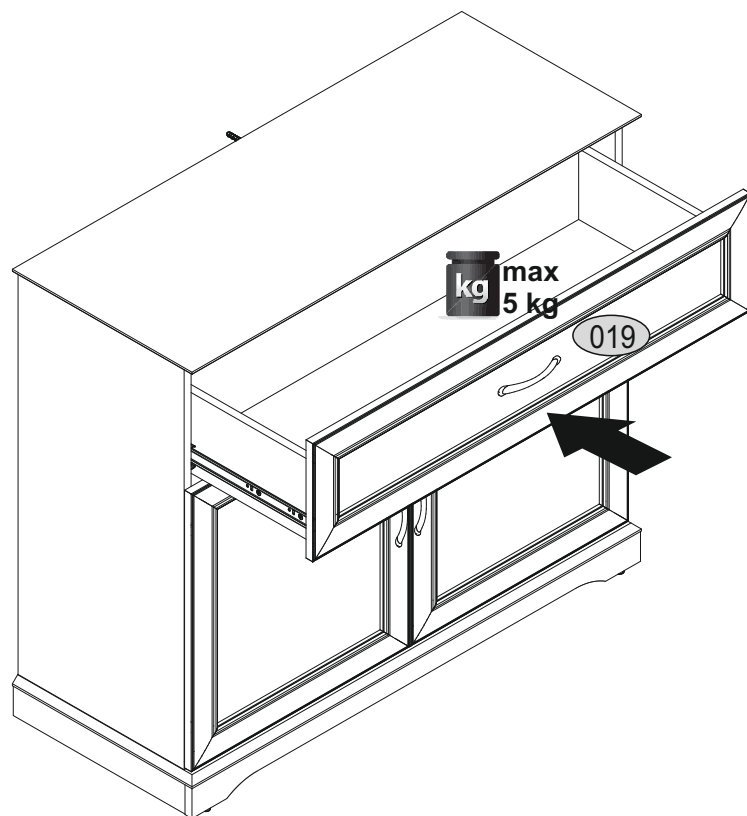

17

