

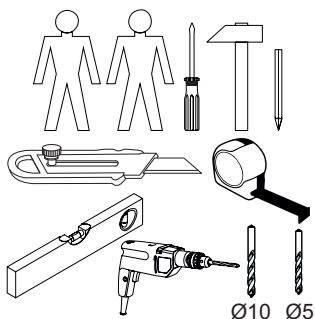
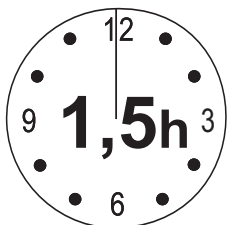



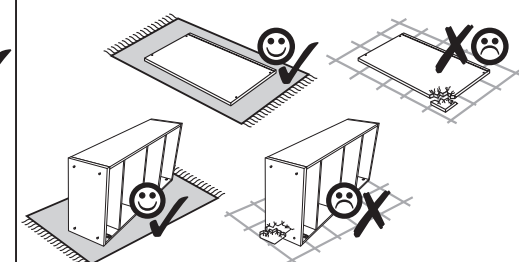


Ø10 Ø5

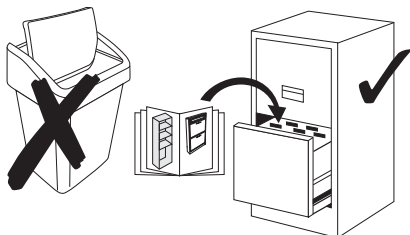


Instrukcja montażowa


KOM 3D1S SORETTO

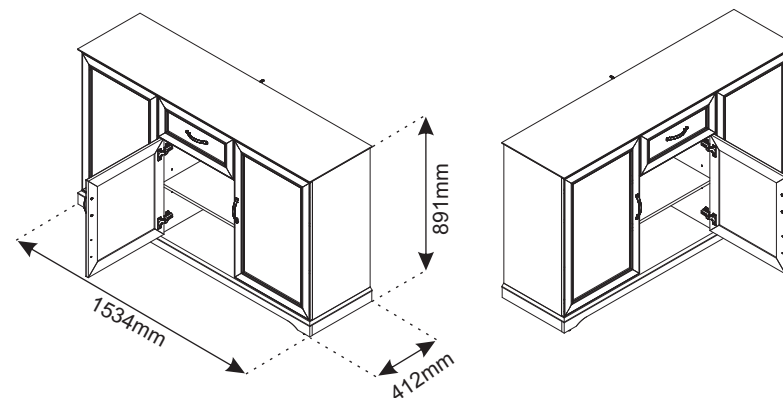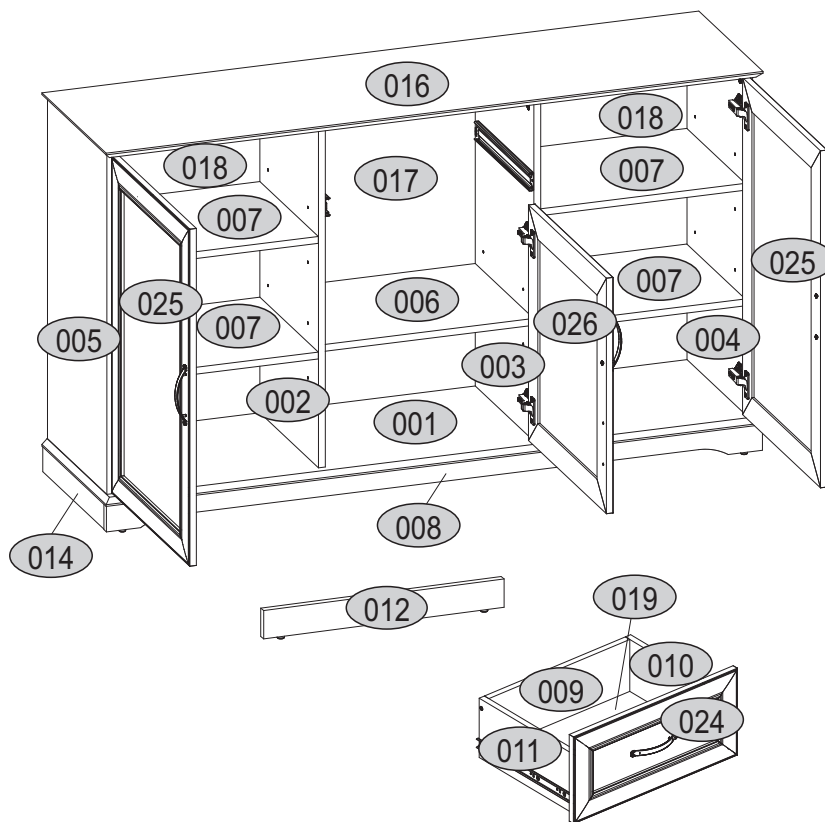

Kod	Wymiary				Pakiet
001	1534	412	16	1	1/2
002	793	376	16	1	1/2
003	793	376	16	1	1/2
004	793	381	16	1	1/2
005	793	381	16	1	1/2
006	487	375	16	1	1/2
007	478	375	16	4	1/2
008	1532	60	16	1	1/2
009	430	160	16	1	1/2
010	350	160	16	1	1/2
011	350	160	16	1	1/2
012	519	60	16	1	1/2
013	395	60	32	1	1/2
014	395	60	32	1	1/2
016	1534	412	16	1	1/2
017	811	503	2,5	1	2/2
018	811	495	2,5	2	2/2
019	352	448	2,5	1	2/2
024	500	234	18	1	2/2
025	500	787	18	2	2/2
026	500	550	18	1	2/2
Akcesoria				1	1/2


Akcesoria:

30x f1 $\varnothing 8 \times 30$ 	18x r1 15×12 	18x r16 $\varnothing 5 \times 24$ 	12x e1 $\varnothing 7 \times 50$ 
55x l1 	6x b119 	42x p25 $\varnothing 3.5 \times 16$ 	4x n260.01 
1x f3 	1x lb-350 	2x a145 	46x s4 
4x a144 	1x p17 $\varnothing 6.0 \times 50$ 	4x c80 	1x n14 
12x s2 	1x z1 	8x k1 	6x n221.01 
20x d1 	2x j2 $\varnothing 4 \times 9$ 		

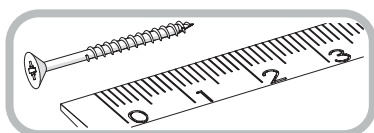


1

r1	f1	c80	k1	a144	p25
x10	x14	x2	x6	x4	x8

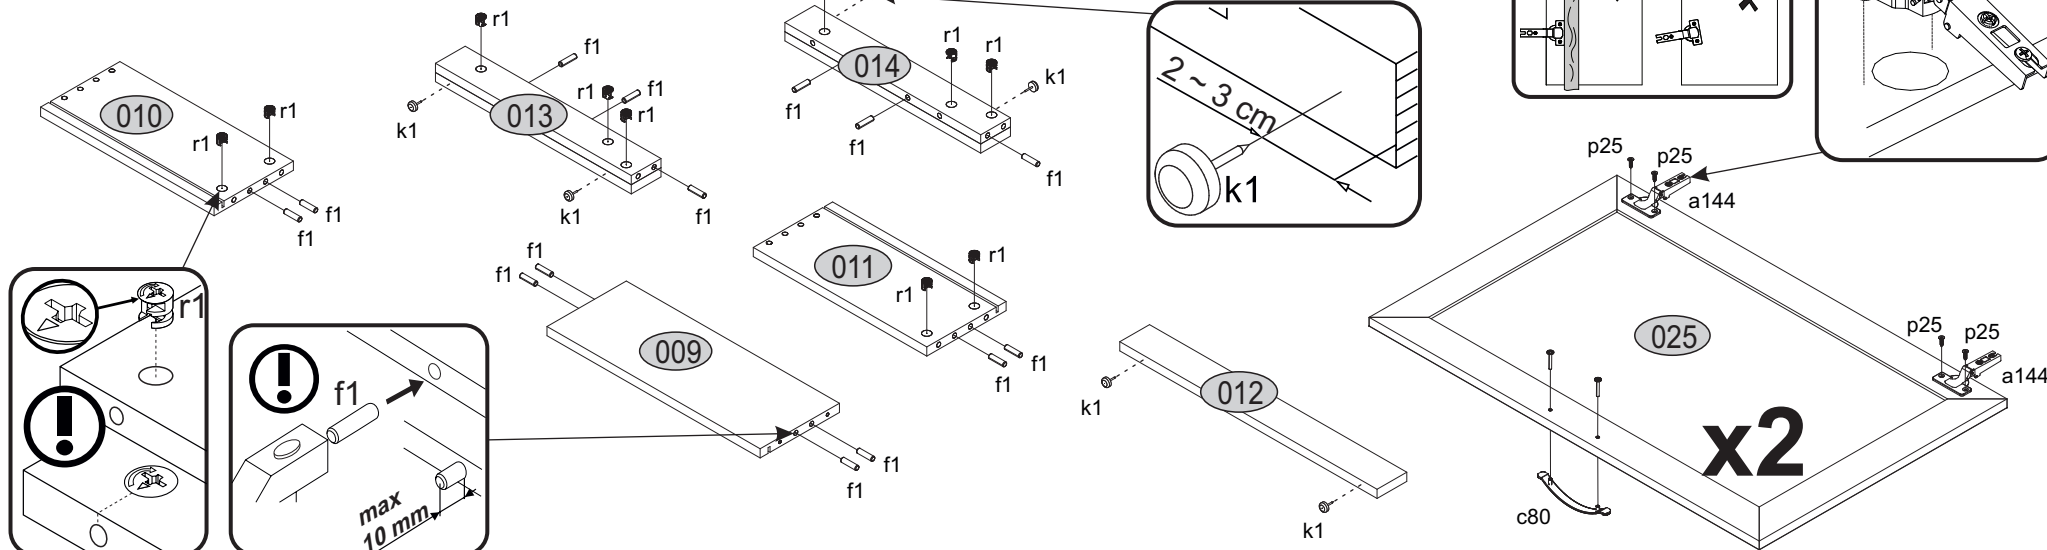


2

r16	j2	c80	k1
x14	x2	x1	x2





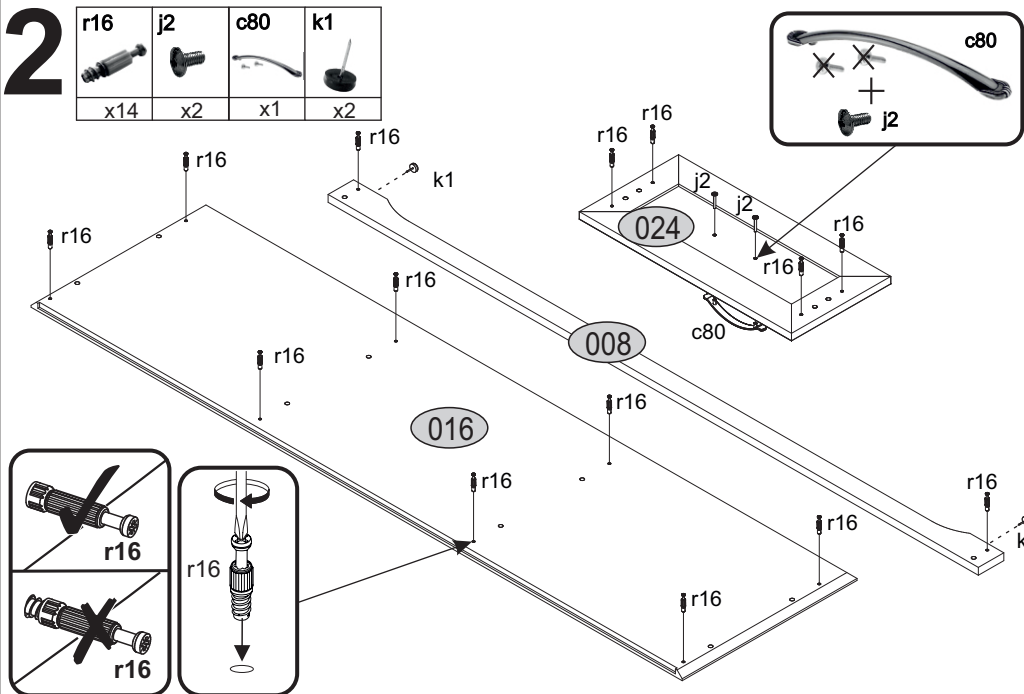


3

r1	d1	b119	f1
x4	x8	x4	x8


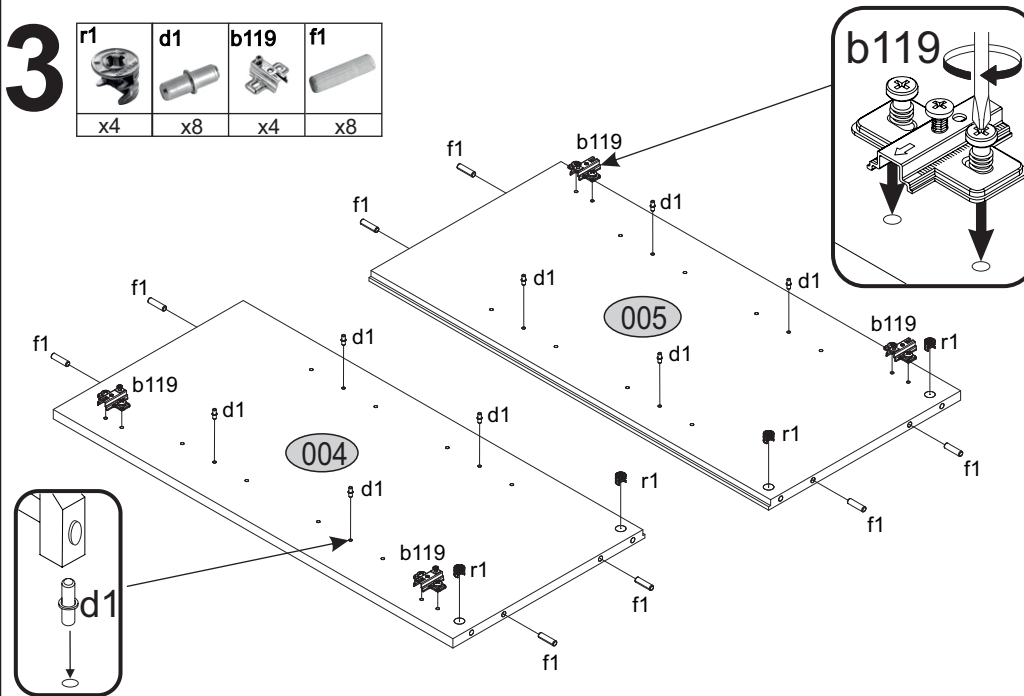


c80	p25	a145	lb-350	b119	d1	r1	f1
							
x1	x10	x2	x1	x2	x12	x4	x8

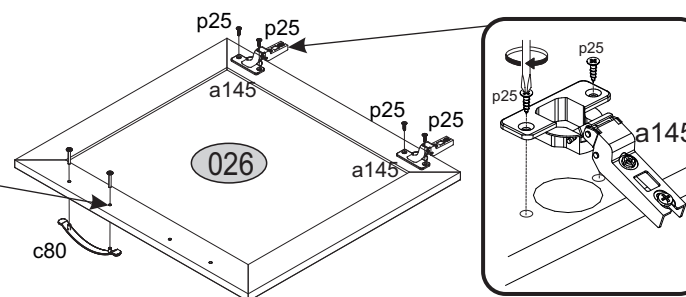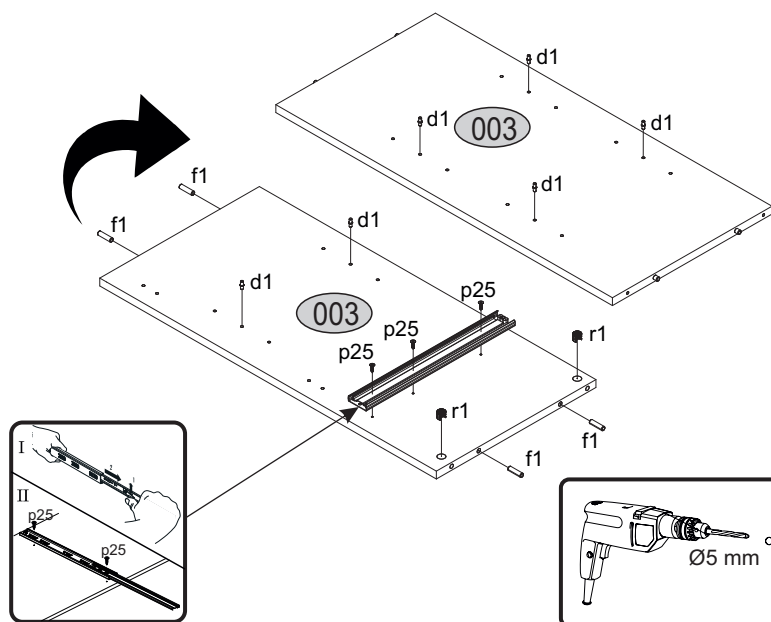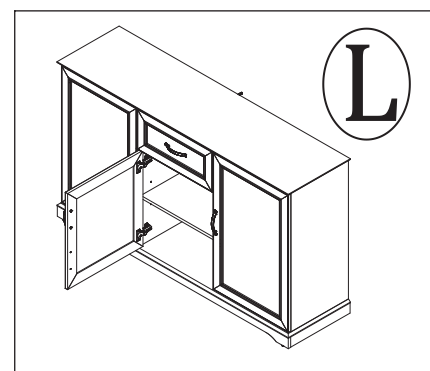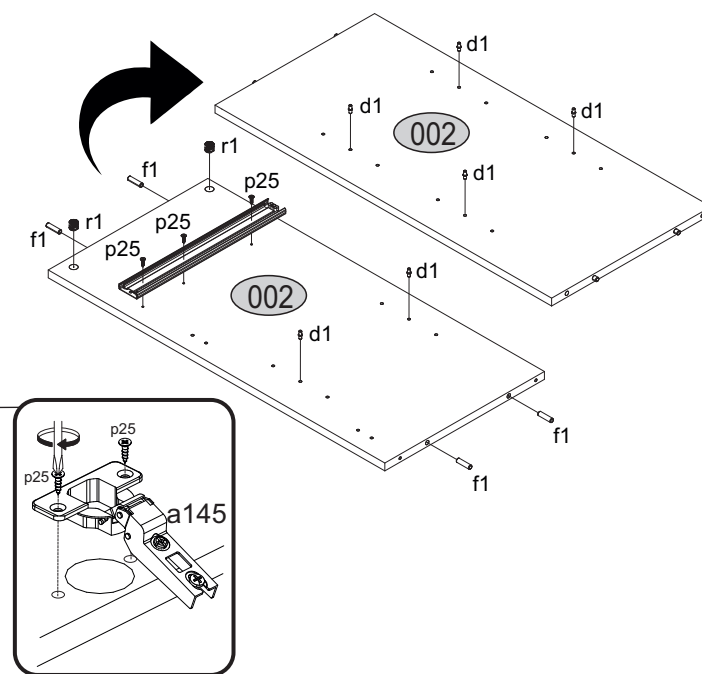
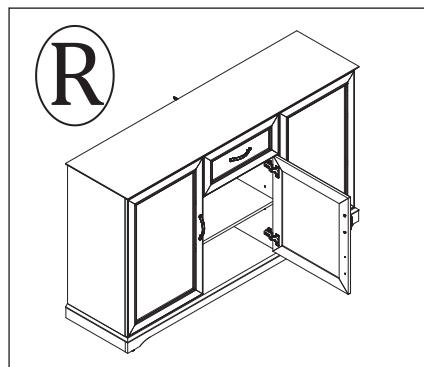


5

n221.01	p25	r16
		
x6	x6	x4

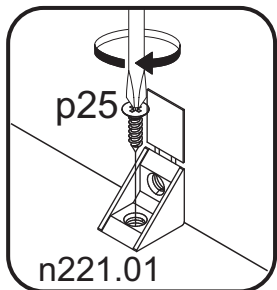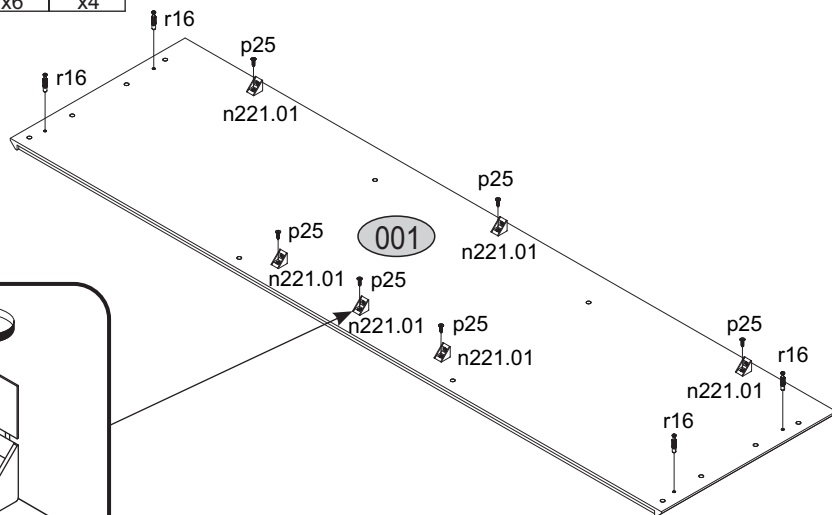


6

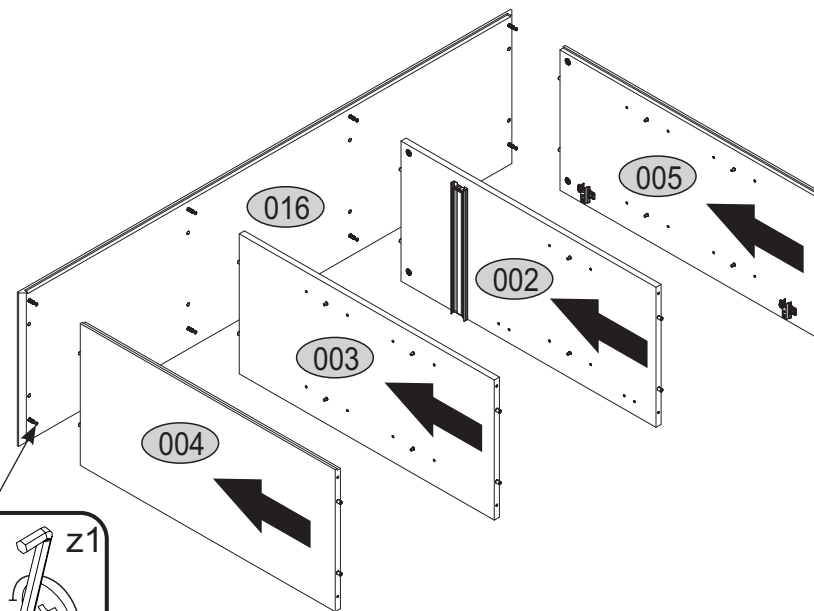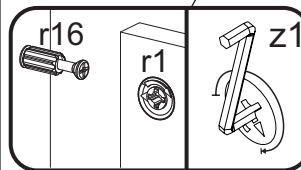

7

p25



x3

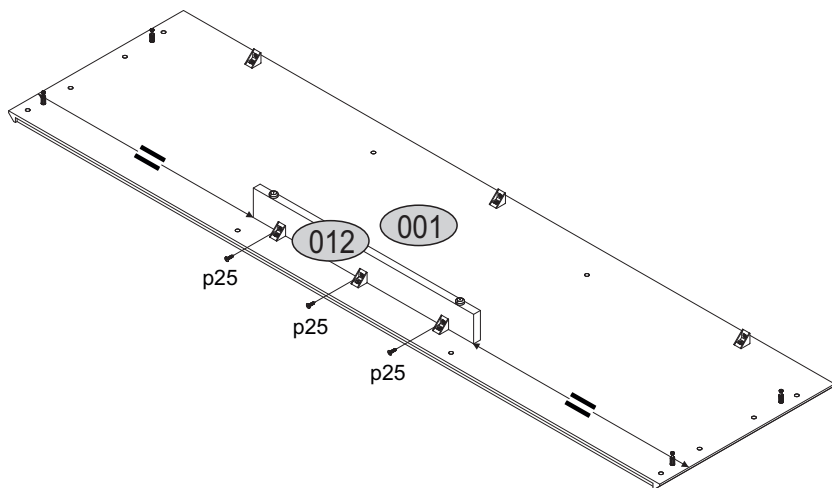


8

e1



x8

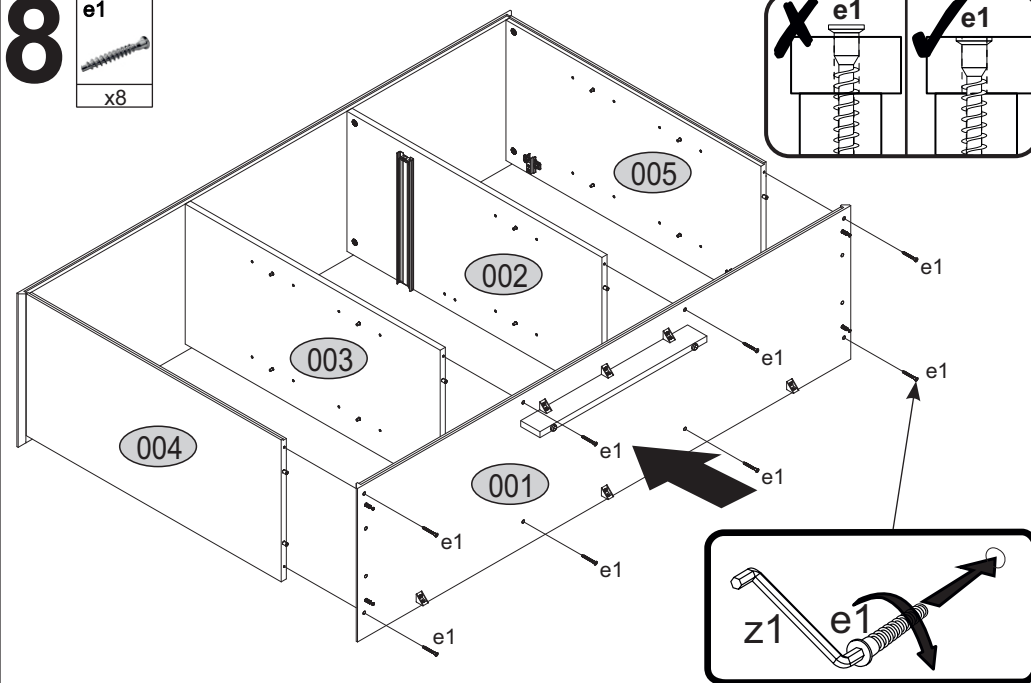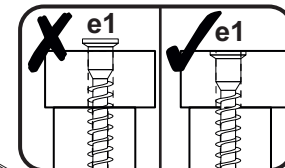


9

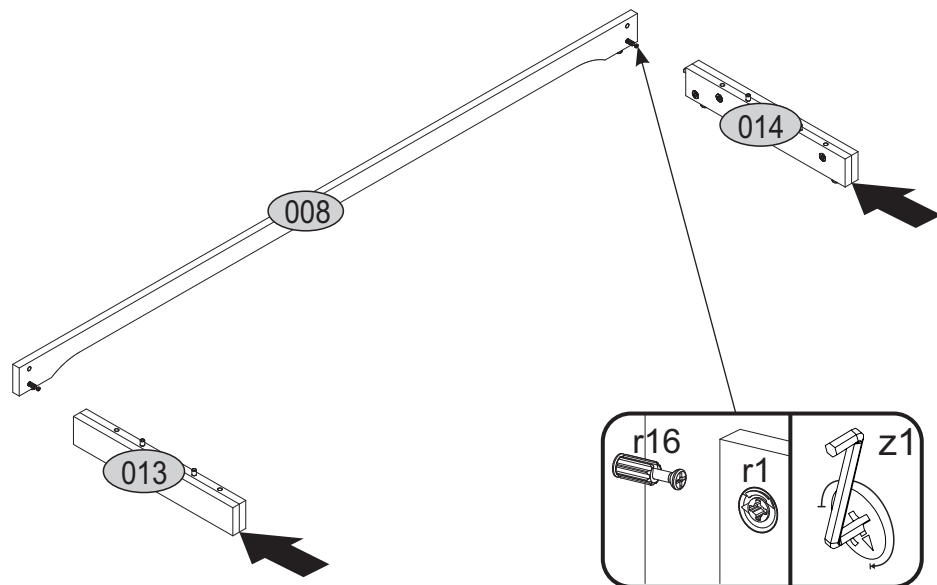



10

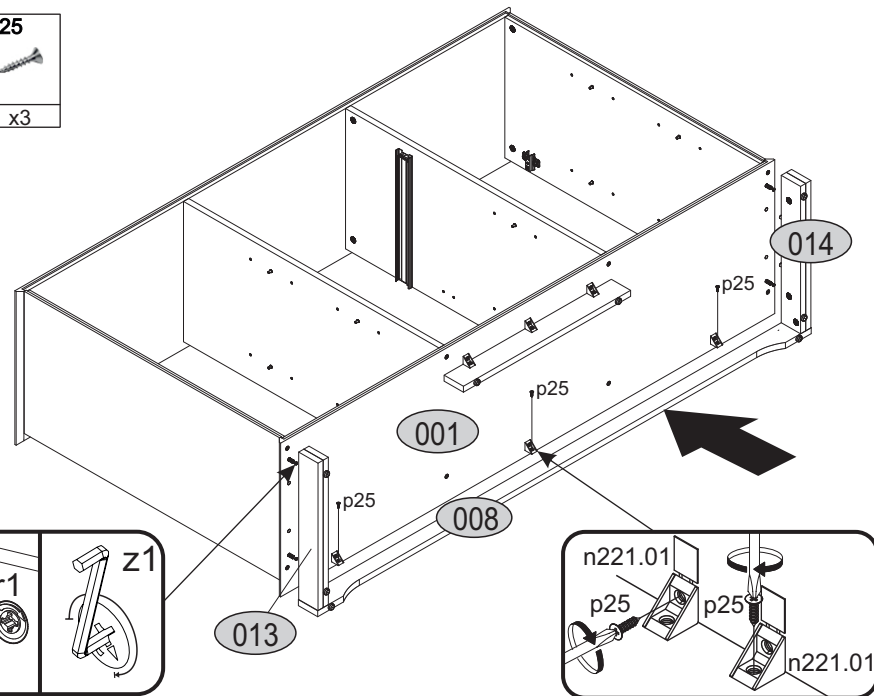

11

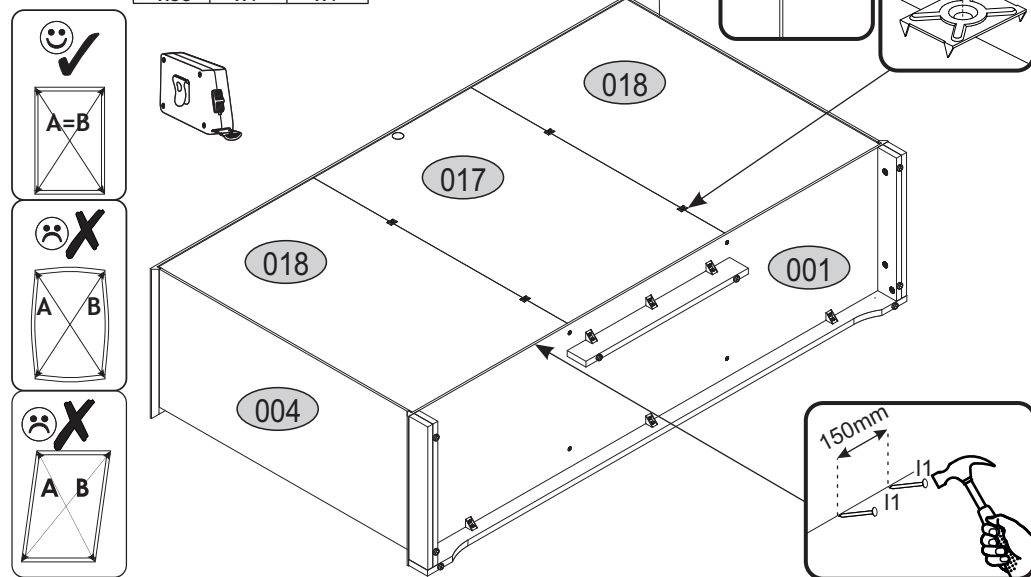

12


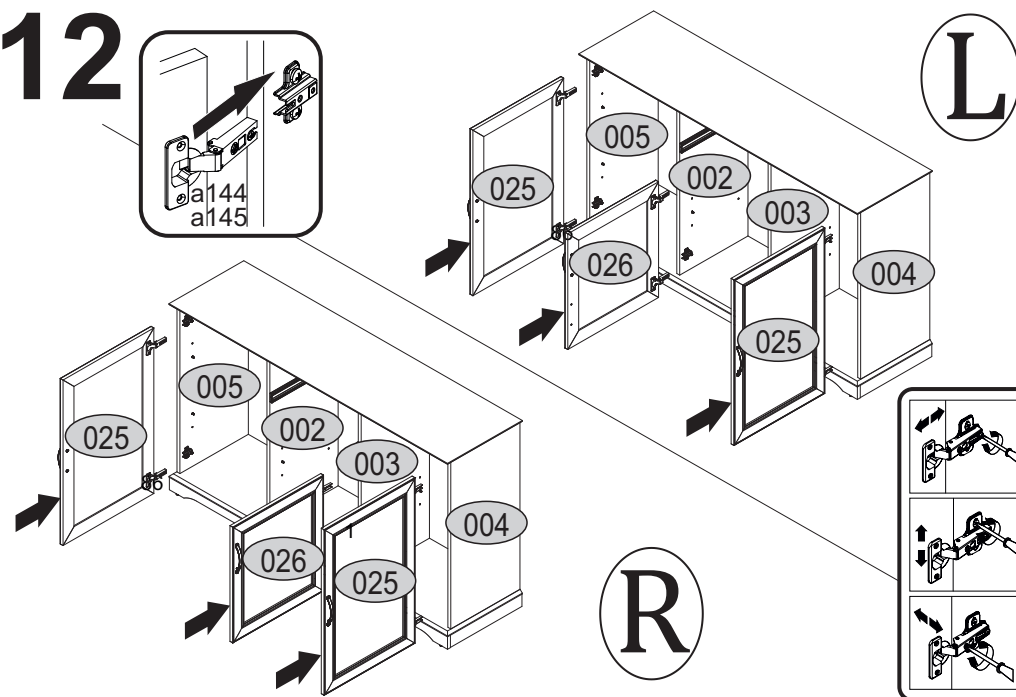
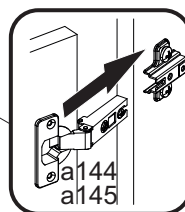


13






L



R

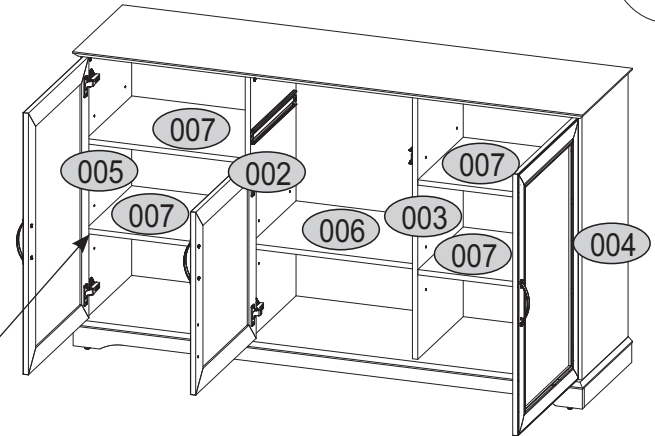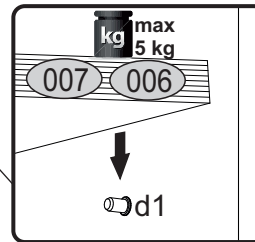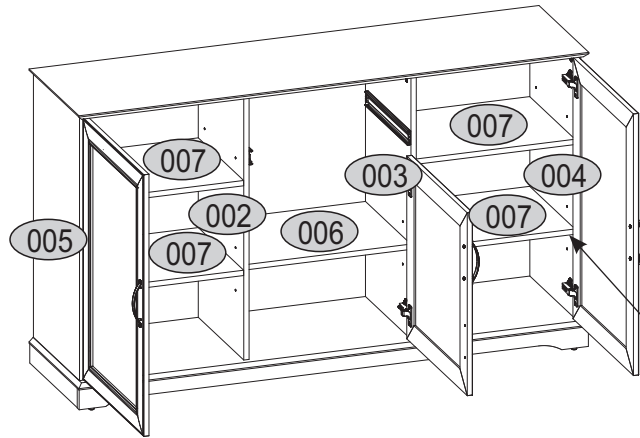


14

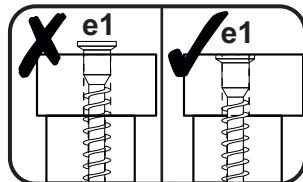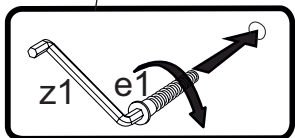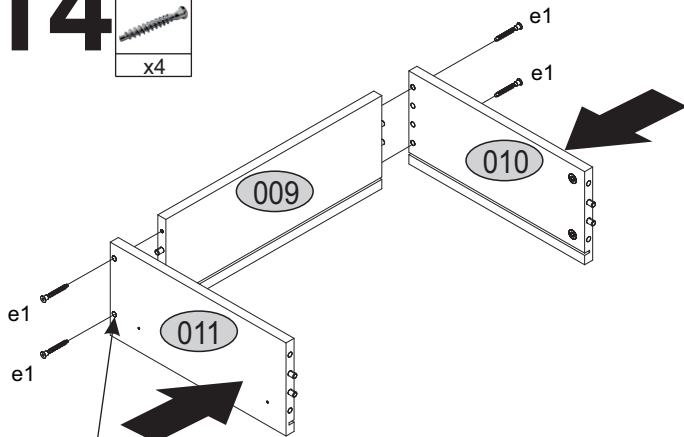



15

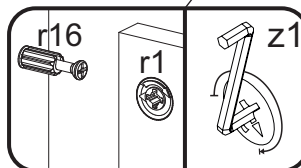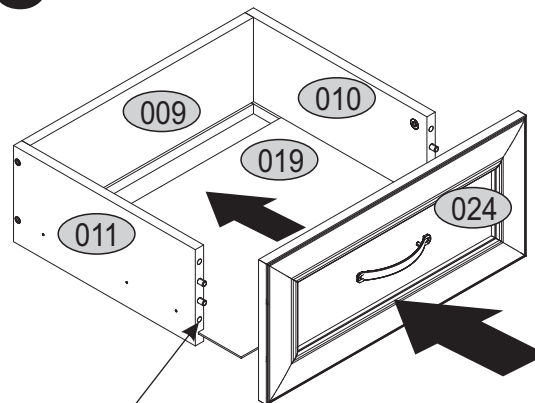

16

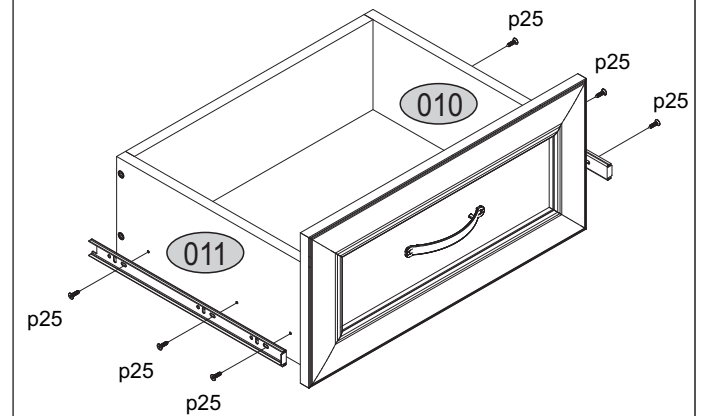

17

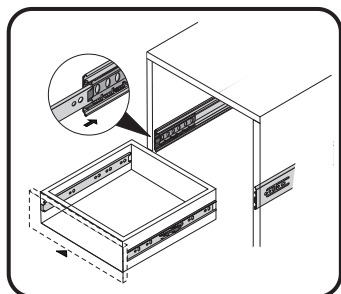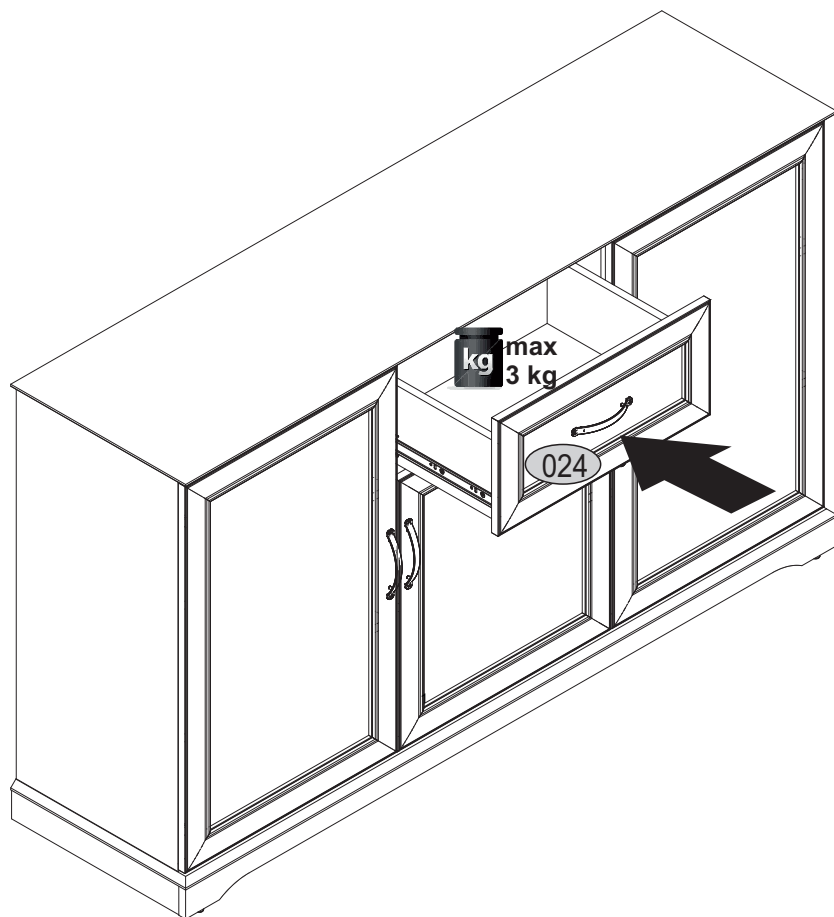

18

p17	f3	n14	p25	s2	s4
x1	x1	x1	x2	x12	x46

